


Mobile Printer

Driver Setup Manual


I. USB to Serial Driver Installation

Double click the installation icon  PL2303_Prolific_DriverInstaller_v10518.exe ,

Then, it will show as below picture:

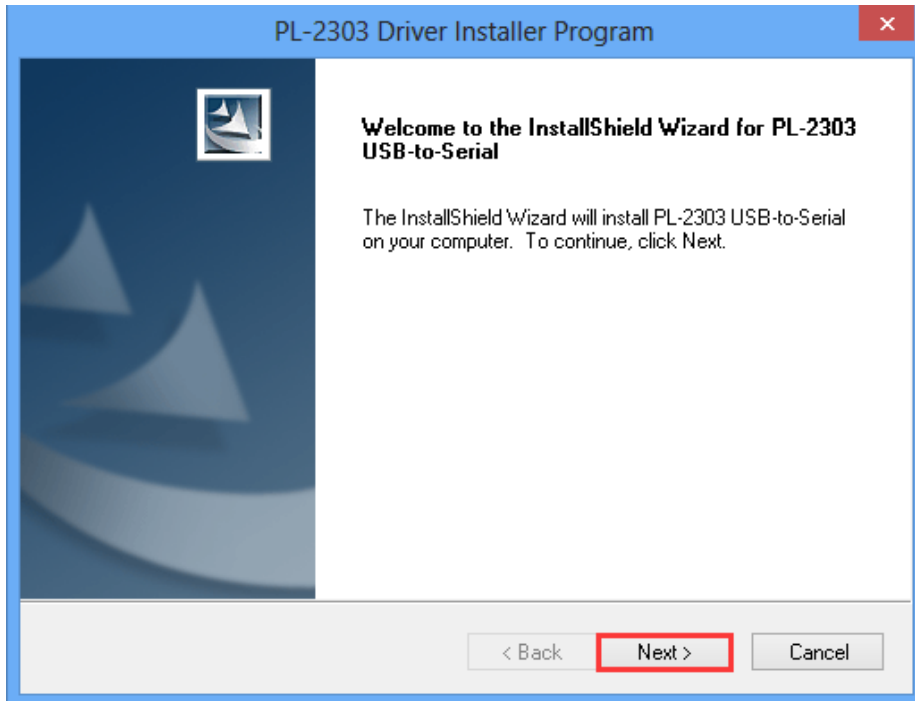

Select “Next”, it will show as below picture:

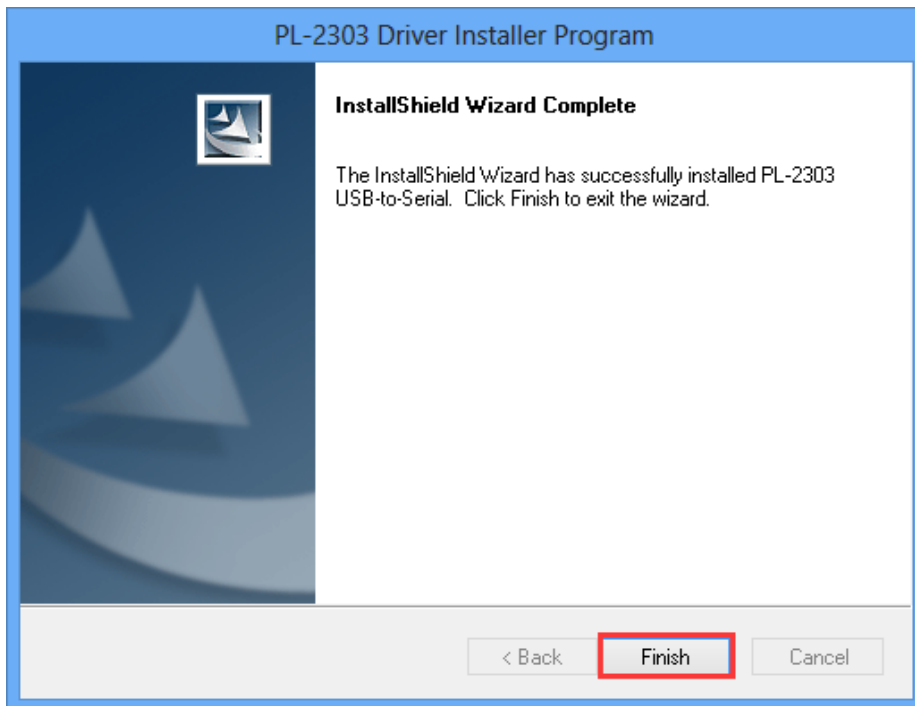


Click “Finish”, the USB to Serial Driver is installed.

Firstly, if you want to connect the Mobile Printer to computer, please connect the printer to computer by the USB Data Wire. Turn on the computer power. Then you can see the COM number from the lower right corner of the computer desktop. Then you can install the Windows Driver.

II. Windows Driver Installation


Double click the installation icon  DriverInstall.exe ,

Then, it will show as below picture:

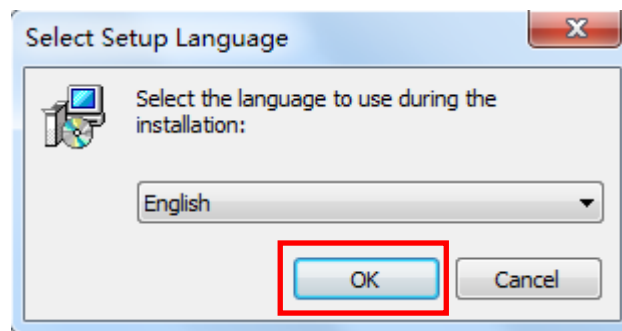


Select the language, then click “OK”.

Then, it will show as below picture:

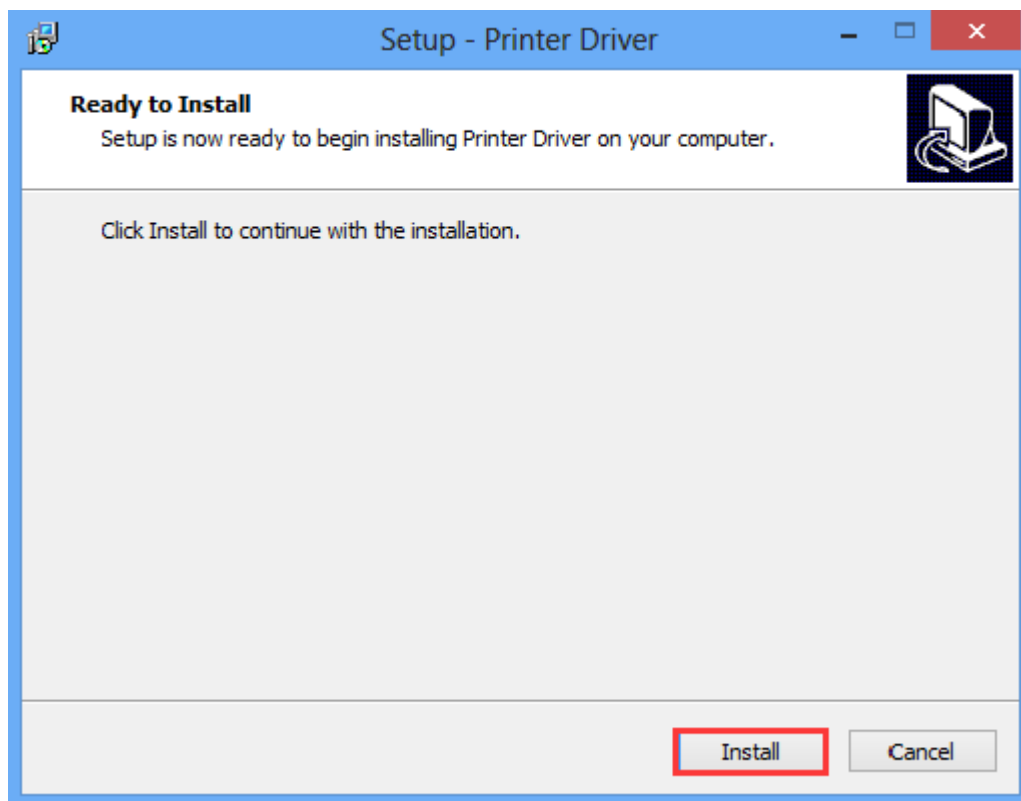


Then click “Install”.

Then, it will show as below picture:

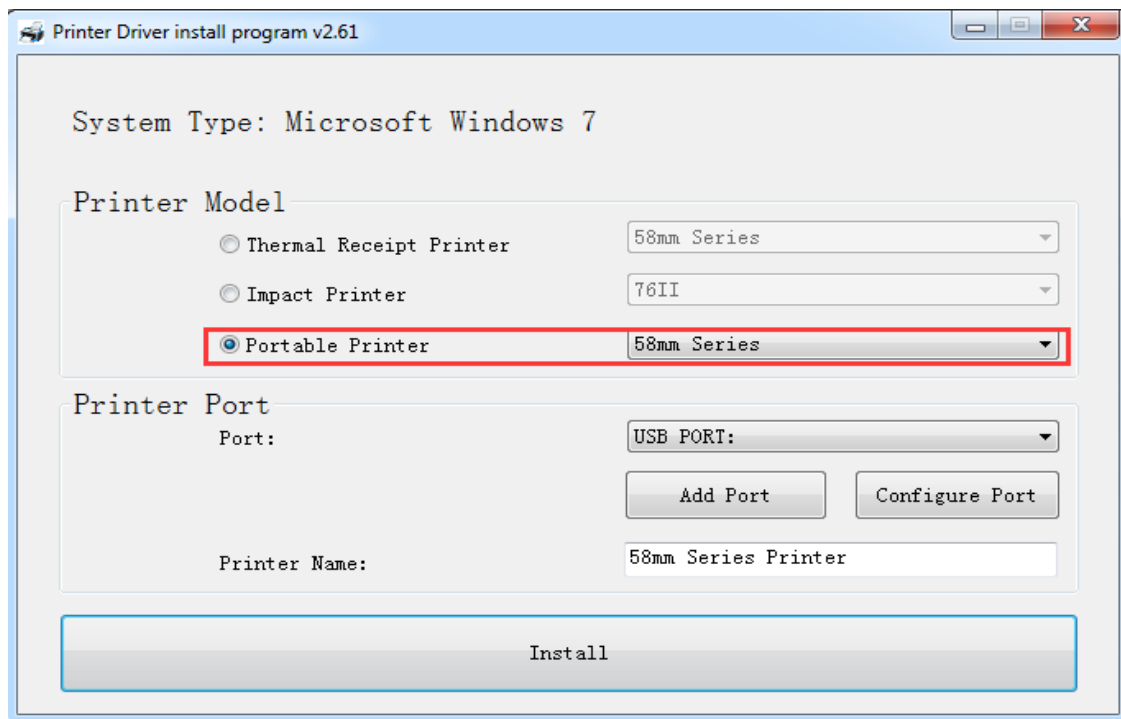


Select the Printer Model and available computer port, such as "USB PORT" as the picture, then, click "Install".

And then, it will show as below picture:

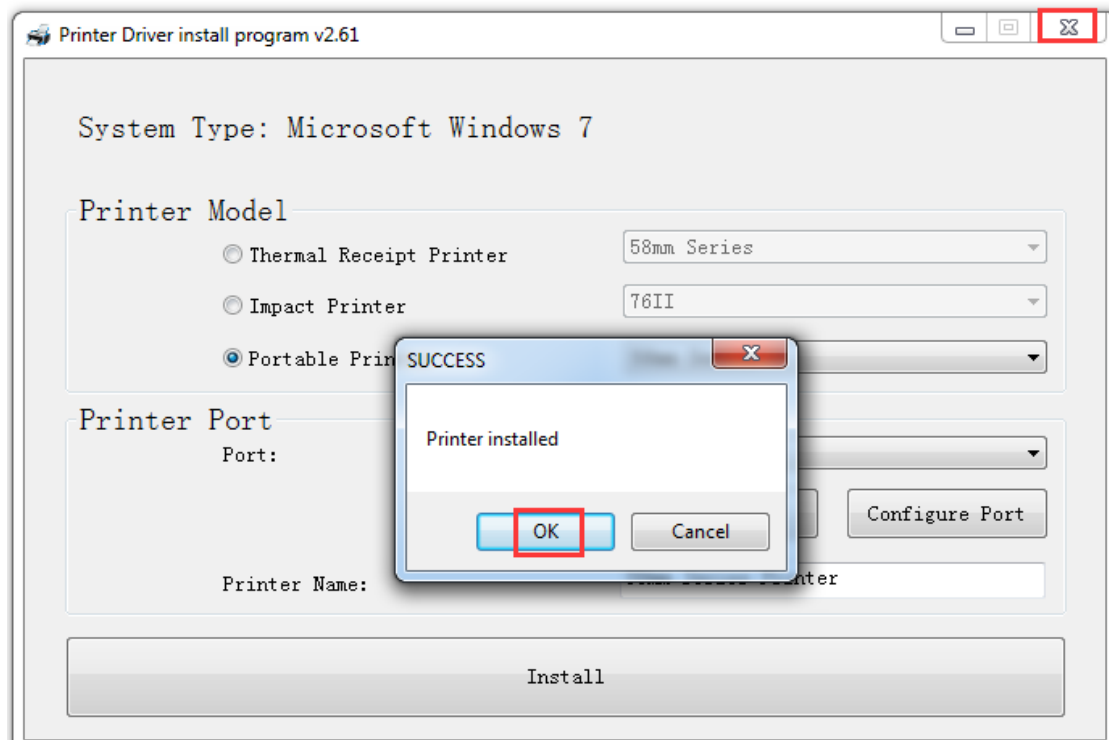


Select "OK", and then click "Exit". Wait until it shows the below picture, it means, the printer driver has been installed successfully.

Then click “Finish” to finish driver installation.

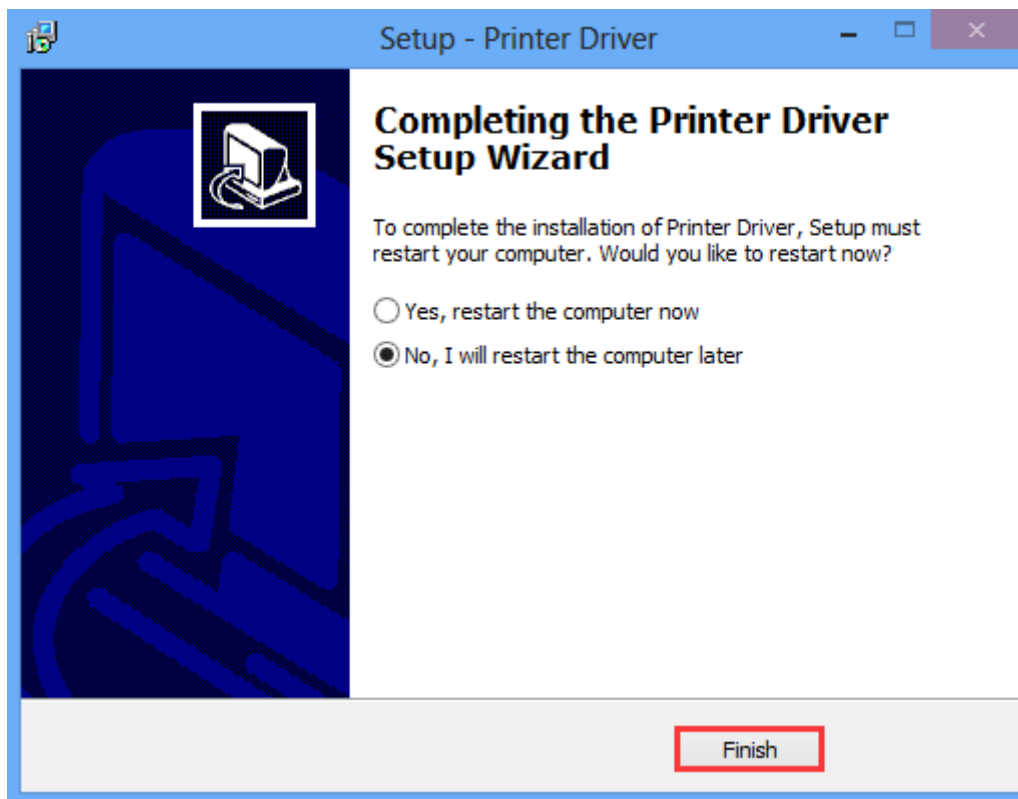


III. Printer Setup and Testing

2.1 Setup Printer Properties

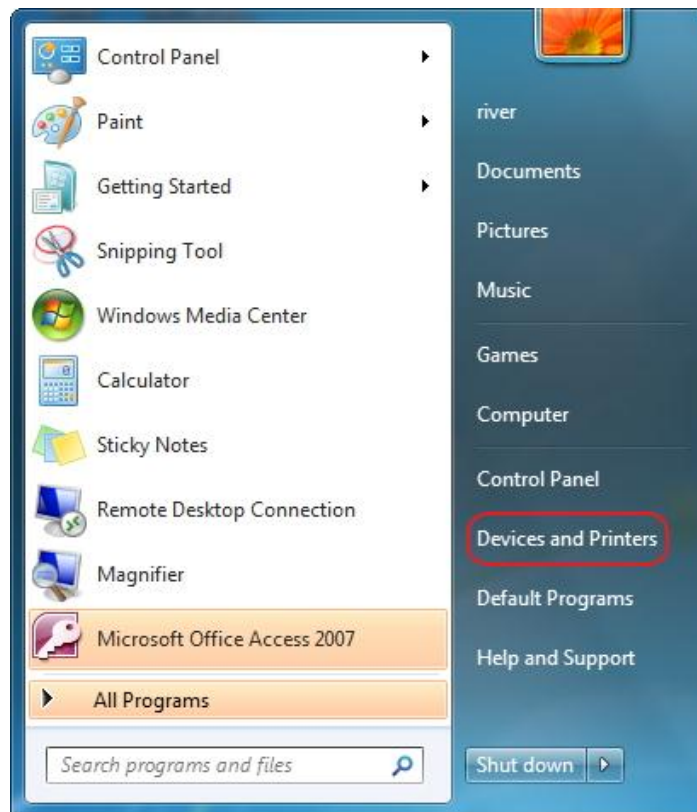


Click Start Menu, and then click “Devices and Printers”, just as above picture

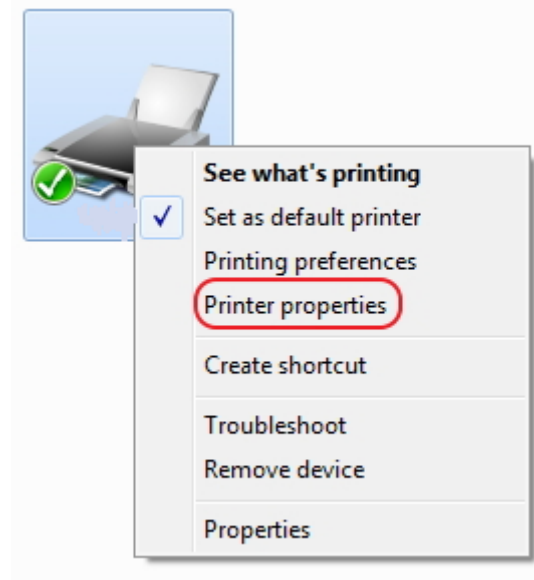

Right-Click “58mm Series Printer” and then click “Printer properties”

And then, it will show as below picture:

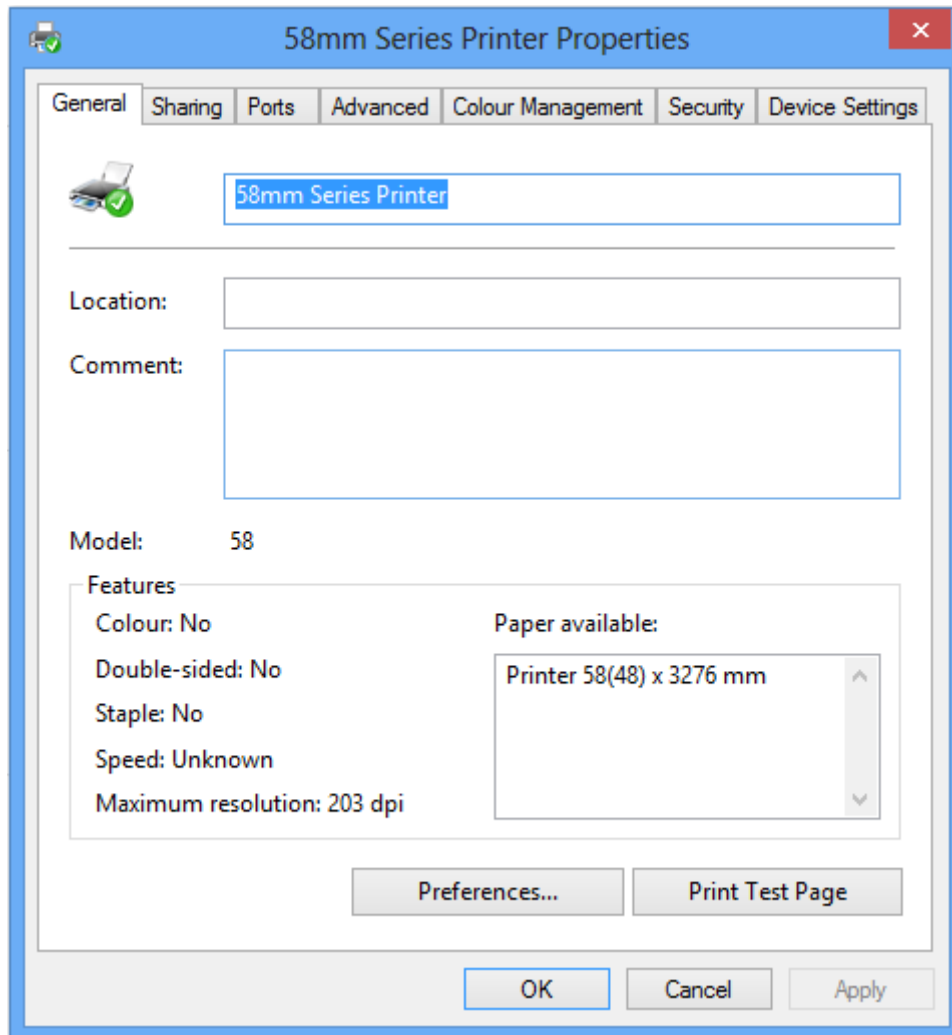


On 58mm Series Printer Properties “General”, you could configure the printer communication port, such as Serial port. You also could set the paper specification, beeper etc.


After all the setting, you could start to print the testing page.

2.2 Serial Port Configuration

On 58mm Series Printer Properties “Ports”, you could configure the Serial Port to communicate printer to computer, see the below picture:

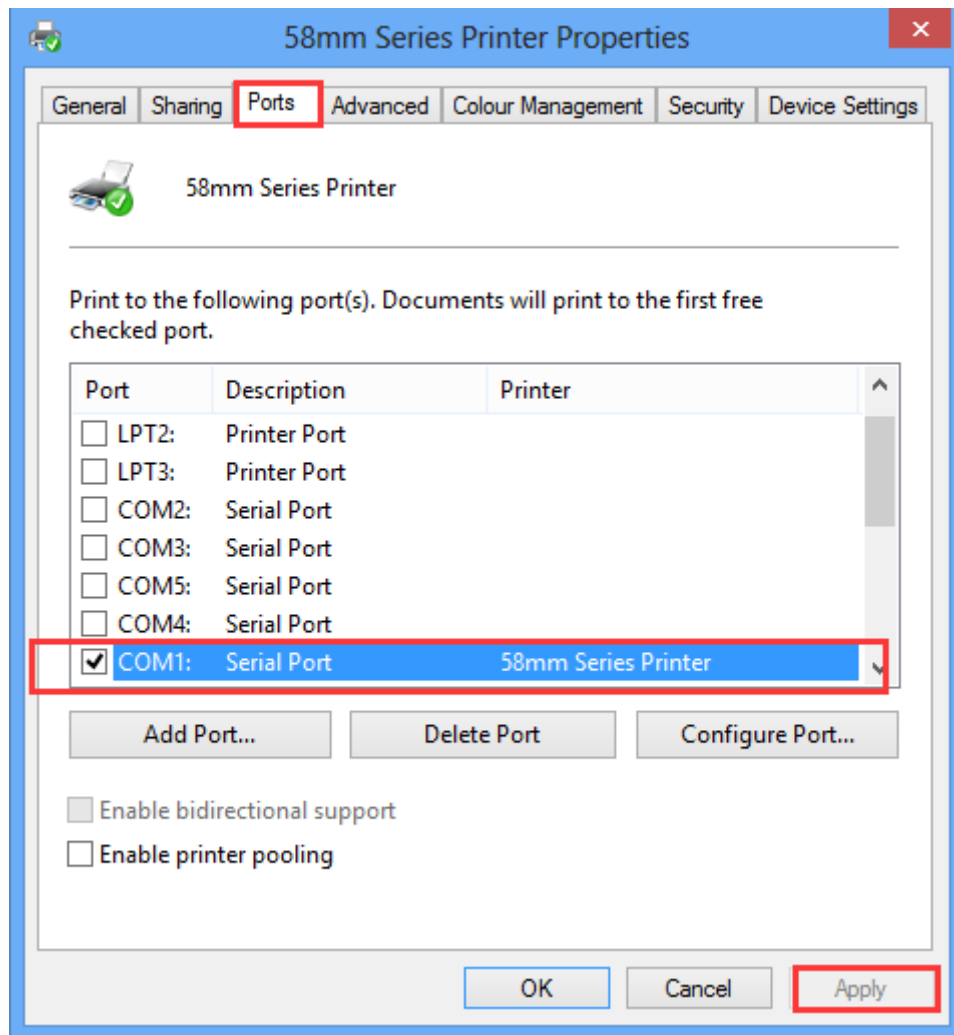

Select available computer COM port, such as "COM1" as the above picture, and then click "Configure Port" to set the detailed parameter.

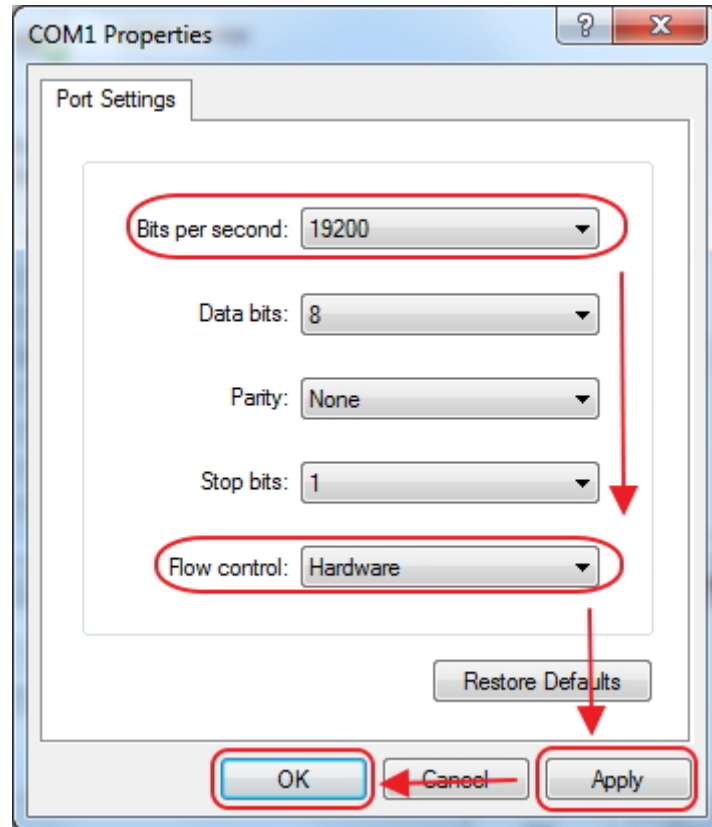

"Bit per second" means Serial port baud rate, it must same as printer setting. For example, if printer baud rate is "19200bsp", then you must select "19200" on "Bit per second", just as above picture. (Factory default baud rate is 19200bps)

"Flow control", we recommend select "Hardware"

After setting, click "Apply", and then click "OK".